



***Society of Cable
Telecommunications
Engineers***

**ENGINEERING COMMITTEE
Interface Practices Subcommittee**

AMERICAN NATIONAL STANDARD

ANSI/SCTE 61 2007

**Test Method for
Jacket Web Separation**

NOTICE

The Society of Cable Telecommunications Engineers (SCTE) Standards are intended to serve the public interest by providing specifications, test methods and procedures that promote uniformity of product, interchangeability and ultimately the long term reliability of broadband communications facilities. These documents shall not in any way preclude any member or nonmember of SCTE from manufacturing or selling products not conforming to such documents, nor shall the existence of such standards preclude their voluntary use by those other than SCTE members, whether used domestically or internationally.

SCTE assumes no obligations or liability whatsoever to any party who may adopt the Standards. Such adopting party assumes all risks associated with adoption of these Standards or Recommended Practices, and accepts full responsibility for any damage and/or claims arising from the adoption of such Standards or Recommended Practices.

Attention is called to the possibility that implementation of this standard may require use of subject matter covered by patent rights. By publication of this standard, no position is taken with respect to the existence or validity of any patent rights in connection therewith. SCTE shall not be responsible for identifying patents for which a license may be required or for conducting inquiries into the legal validity or scope of those patents that are brought to its attention.

Patent holders who believe that they hold patents which are essential to the implementation of this standard have been requested to provide information about those patents and any related licensing terms and conditions. Any such declarations made before or after publication of this document are available on the SCTE web site at <http://www.scte.org>.

All Rights Reserved

© Society of Cable Telecommunications Engineers, Inc. 2007

140 Philips Road

Exton, PA 19341

TABLE OF CONTENTS

1.0	SCOPE	1
2.0	EQUIPMENT.....	1
3.0	TEST SAMPLES	1
4.0	MEASUREMENT METHODOLOGY	1
5.0	RECOMMENDED FIELD PRACTICES.....	3
6.0	REPORT FORM.....	5

1.0 SCOPE

The purpose of this test procedure is to provide a test method for measuring the force required to separate webbed or “figure-eight” coaxial cable constructions. These designs are commonly referred to as messenger, dual, or Siamese cables for the two members that are joined by a web and common overall outer jacket. This procedure is for use in a lab environment to evaluate design and record forces required to remove one member from another. Also included is an industry “best practices” or recommended method for separating the co-joined members in a field application.

2.0 EQUIPMENT

2.1 Utility Knife

2.2 Diagonal Cutters

2.3 Tension Tester (with chart recorder if available)

3.0 TEST SAMPLES

3.1 Preferred length of samples for testing in the tensile tester is 18 in (457 mm) Ten (10) samples shall be evaluated from each reel of product under test. Allow sample to stabilize to laboratory temperature, and record.

4.0 MEASUREMENT METHODOLOGY

4.1 When separating with a tensile tester, the initial cut between the two components shall be approximately 6 in (152 mm). Use a utility knife to separate the two components in the web area being careful not to damage the jacket on either side of the web. The 6 in (152 mm) separation allows enough length to be gripped by the upper and lower fixtures of the tensile tester. The test shall be completed at 70° F \pm 2 ° F (21° C \pm 1° C).

4.1.1 Follow tensile tester manufacturer’s specification for calibration and warm up prior to testing the samples. Fixtures shall be separated at a rate of five centimeters (two-inches) per minute. A load range suitable for the material under test shall be used, i.e. 20 lbf (89 N) for Polyvinyl chloride (PVC) and for Polyethylene (PE) drop style products. Place sample in the tensile tester to obtain separation due to shear. (See Figure 1) Utilize a chart recorder if available, prior to starting crosshead separation. An initial peak load will be observed at start up, but shall not be considered as the maximum load for separation. Once the peak load has subsided, a nominal load of some lower value will be observed. (See Figure 2) This value shall be recorded as the force required for separation of the two members.

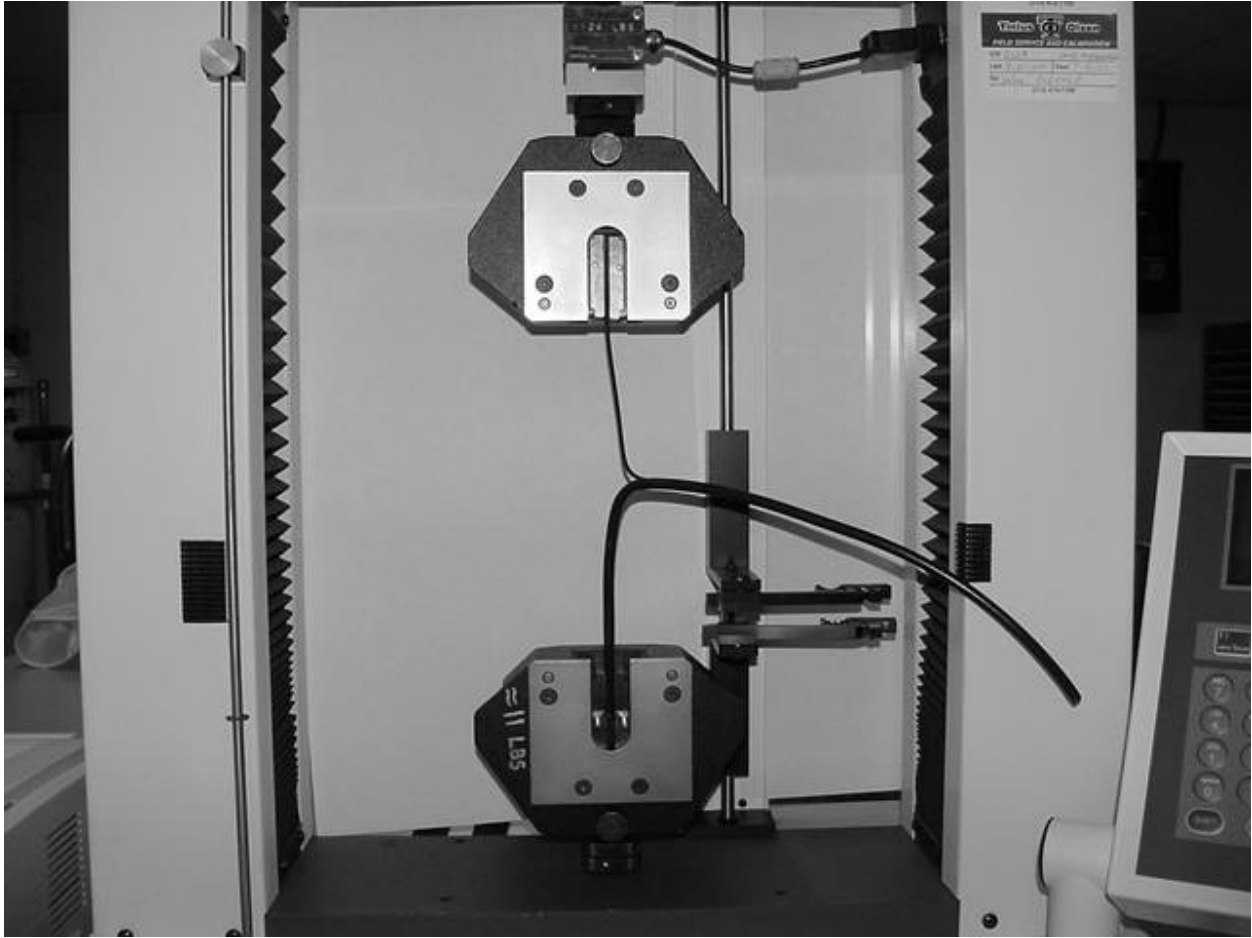


Figure 1 - Sample Setup

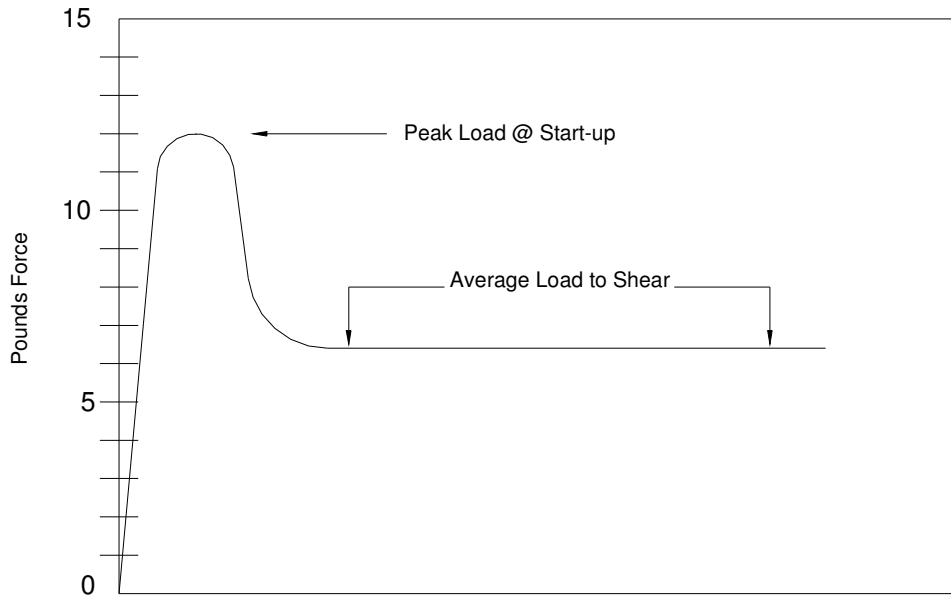


Figure 2 - Sample of Test Results

5.0 RECOMMENDED FIELD PRACTICES

When separating co-joined members, i.e. messengered, dual or Siamese type cables in the field, it is recommended that the separation be performed using a shearing method as opposed to a tearing action. (See Figure 3) Start the separation with a knife or diagonal cutters. The shear method will help to prevent jacket splitting and tearing on either side of the web.

- 5.1 Inspect along the cable length from where it was initially separated up to where separation was stopped. Any sign of cracks or splits on either side of the web will be considered a failure.

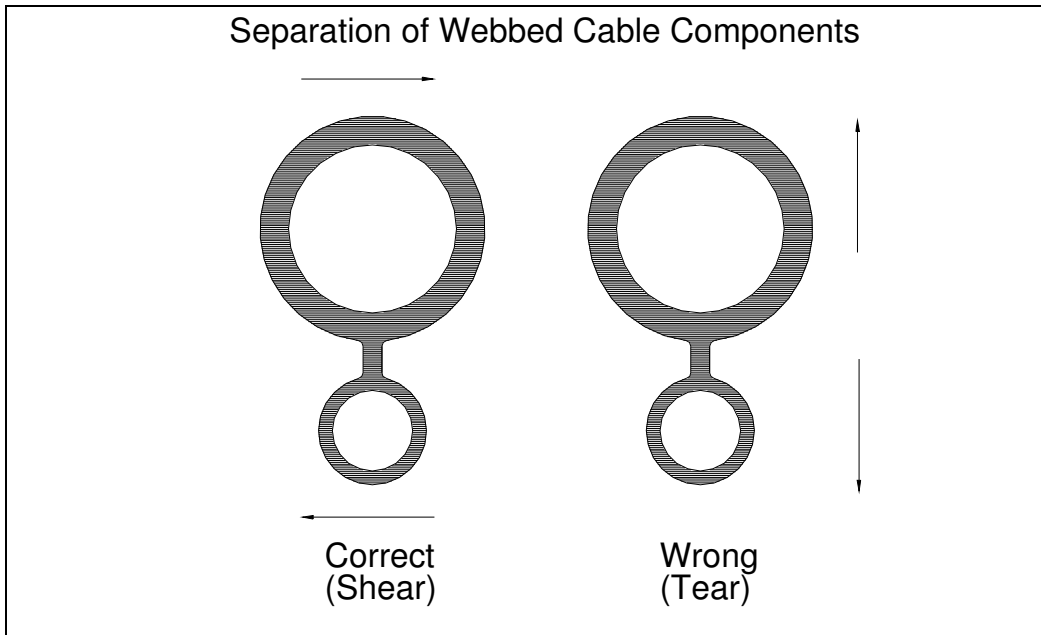


Figure 3 - Proper Method for Separation

6.0 REPORT FORM

Sample

ANSI/SCTE 61 2007 – Test Method for Jacket Web Separation			
Technician:			
Date:		Temperature EC	
Pull Rate:	2" /minute	Equipment Calibration Date	
Sample Identification:			
Sample No.	Pounds Force		
1	Nominal		Comments
2			
3			
4			
5			
6			
7			
8			
9			
10			